

USB VoIP Phone

User Manual



Large dot-matrix graphic LCD with blue back light

1. Instruction

1.1 Summary

Plug into your computer's USB port, you can make and receive skype calls. Phone rings for all incoming calls, dial Skype contacts and SkypeOut numbers from the phone. With dot-matrix LCD, ear-phone socket, keypad and ringer, it is easy to use it just as mobile phone.

1.2 Features

1. Dot-matrix graphic LCD, backlight
2. Dial skype contacts (speed dial number) and SkypeOut number by phone keypads
3. With ear-phone socket, easy to free your hands
4. Phone rings for all incoming calls, ring style selectable by phone keys
5. Caller ID function for skype calls, support multi-language display.
6. Easy to review skype contacts and call list on LCD
7. Echo cancellation, noise reduction, full duplex communication

1.3 System Requirements

1. Windows 2000 or XP
2. 400MHz processor and free USB1.1 or USB2.0 port
3. 128MB RAM and 15MB free disk space
4. Any broadband connection or minimum 33.6 Kbps dialup

1.4 Package Contents



1. One USB-P5D
2. One user manual
3. One installation CD

2 Using the USB-P5D


2.1 Keypad Instruction




: **Contacts**

- (1) Press to display the contacts, then press up and down to scroll the contacts.
- (2) Press  to back to ready state.
- (3) Press  to call out the friend displayed on LCD.
- (4) The contacts are sort by name.

: **Call List**

- (1) Press to display the call list, then press up and down to scroll it.
- (2) Press  to back to ready state.

(3) Press  to call out the friend displayed on LCD.

(4) It is sort by latest talking time.

: **Up/Down**

- (1) Press to scroll the contacts while viewing contacts.
- (2) Press to scroll the call list at ready state or viewing call list.
- (3) Press to adjust volume while talking.





: **Dial/Answer**

- (1) Call out or answer a call.
- (2) Press to hold/unhold the call while talking.

: **Hang up**

- (1) End talking or refuse incoming call.
- (2) Press the key to back to farther menu.

: **Help**

- (1) Press to display the selected contact information while viewing contacts. Press  to call out the contact. Press  to return to farther menu.
- (2) Press to display all records of selected contact while viewing call list. Press it again to display the selected contact's information. Press  to call out the contact. Press  to return to farther menu.
- (3) When you talk to more then one contact, press the key to switch the calls.

: Press to scroll the ringer style.

C: Delete the inputted wrong number.

0-9, *, #: digital keys

- (1) Press to input digital numbers.
- (2) Press to send DTMF message while talking.

2.2 Run Skype

- Download Skype software and install it (www.skype.com).
The version must be 1.0.0.106 or higher.
- Run Skype and log in with skype account.


You can create a Skype account as shown below:




After software startup, the icon will appear to the system tray as shown below:



That indicates the Skype are successfully connected to Internet.


If the icon is shown as , you have to check your Internet connection.

 
2.3 Connect USB-P5D to PC

- When USB-P5D is connected to PC, the LCD shows as 

2.4 Run SkypeMate

- Insert SkypeMate installation CD or download SkypeMate software, then install it.
- Run SkypeMate**

Double-click the icon  on the desktop, the Skype program will pop up the window as shown below:

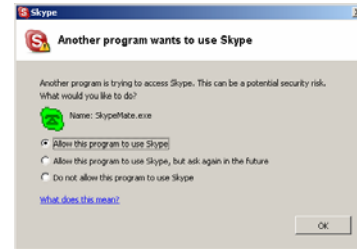


Select the first option “Allow this program to use Skype”, click “OK” button.


Note: If you selected the wrong option, you can make another selection. Please see **2.8. FAQ /problem3** for detail.

After running SkypeMate, the icon will appear to the system tray as shown:





That indicates the device and Skype are connected successfully.

If the icon shown as  (the phone is green and the outside is grey), please run Skype first.



If the icon shown as  (the phone is red and the outside is green), it means USB-P5D connected incorrectly. Please reconnect USB-P5D to PC.

2.5 Make a Call

2.5.1 Call Skype user from contacts

- ▣ Press  to display contacts.
- ▣ Press up and down to select a contact.
- ▣ Press  to call out.


2.5.2 Call Skype user by from call list

- ▣ Press  to display call list.
- ▣ Press up and down to select a contact.
- ▣ Press  to call out.


2.5.3 Call Skype user by Speed-Dial


- ▣ Add "bbc456" to Contacts
- ▣ Assign Speed-Dial for it, example "11"



- ▣ Input number and call out:
Press digital "11" on USB-P5D, then press  to call out.

2.5.4 Call to regular phone

- ▣ Press "00" + "country number +" phone number", then press .



Example: call someone in Beijing, China, please press 00861012345678, and then press .

0086	10	12345678
-----	-----	-----
country code	city code	destination number

Note: (1) You can input "+" instead of "00".

(2) If you want to use this function, you should buy SkypeOut Credit from www.skype.com first.

 
2.6 Answer a call

When a call comes in, USB-P5D will ring. Press  to answer the call, or press  to refuse it.

2.7 State Instruction

(1) Ready state

a. Skype online



b. Skype offline



c. Missed call



(2) The icons display in call list

a. Incoming call



b. Outgoing call



c. Missed call



(3) The icons display in contacts

a. Online



b. Offline



c. SkypeOut




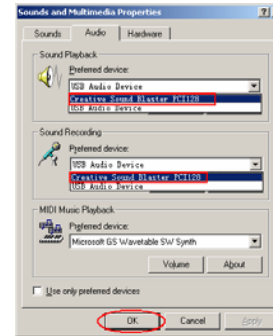 
2.8 FAQ

Problem 1

There is no voice comes out when play music?

Resolution

Please execute the “Control Panel->Sound and Video ->Audio”, set **Sound Playback** and **Sound Recording**'s preference device to your sound card. It shown as below:




Problem 2

The voice is played from the PC's sound card instead of the USB-P5D when I make/answer a call?


Resolution

 Execute “Tools->Options->Sound Devices” to open the window as below:

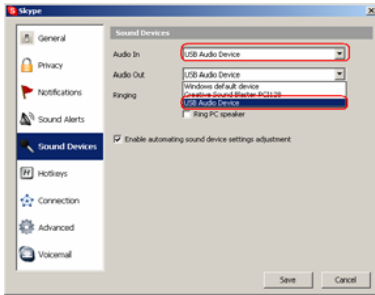

Set “Audio In” and “Audio Out” to “USB Audio Device”.

Problem 3

Skype has been started, but the icon of SkypeMate still shown as  (the phone is green and the outside is grey)?

Resolution

Maybe you have selected the wrong option, you can execute “Tools-> Options-> Privacy-> Manage other programs” access to Skype”, and then choose the needed option, click “Change” button to open the “Manage API Access Control” windows, and make another selection.

USB-P5D Ver.1.0

2005-8-3